
6. Insert the short dowels (H), tapered end first, in the Right and Left End Frames at the front of the chair and the top of the chair, and tap gently into place with the rubber mallet. If using a hammer, place the wood block between the dowels and hammer to avoid marring the teak. Do not use glue when inserting the dowels. Insert the Long Dowels (I) as indicated in the same manner to the Back Frame of the chair. Insert Wood Plugs (J) into screw hole in the back of each end frame and back frame.

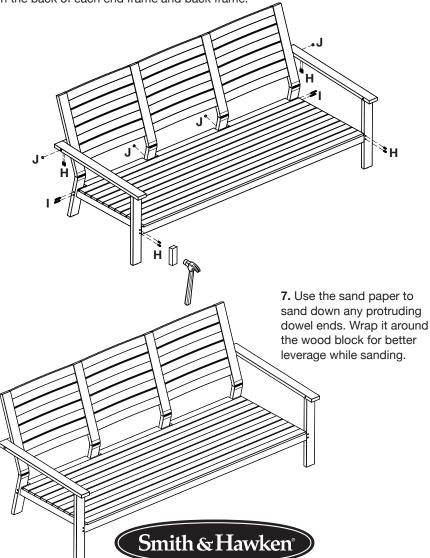

UNCOMPROMISING QUALITY™

Target.com/smithandhawken · Guest Service: 1-800-591-3869 © 2011 Target Stores.



Solenti[™] Collection Sofa

With Smith & Hawken's 30 year history, you can rest assured that each piece we sell is impeccably crafted and beautifully designed to honor the heritage of gardening and outdoor living. We thank you for purchasing the Solenti Collection Sofa, a piece that's sure to bring you years of enjoyment.

To ensure easy assembly, please read this manual. Should you experience any problems, please contact Guest Service at 1-800-591-3869.

NOTE: BEFORE ASSEMBLING, MAKE SURE YOU HAVE ALL PARTS AND HARDWARE LISTED BELOW.

Unpack the Solenti Collection Sofa on a protected, level surface and identify the following components.

,	3 1
Included Parts	Included Hardware
A. Back Frame	E. Short Bolt (7)
B. Seat Frame	F. Long Bolt (2)
C. Left End Frame	G. Barrel Nut (2)
D. Right End Frame	H. Short Teak Dowel (8)
	I. Long Teak Dowel (4)
	J. Wood Plug (4)
	Hex Wrench
	Wood Block
	Sand Paper

Tools Required for Assembly

To avoid marring the teak, use rubber mallet or hammer and the wood block to insert the dowels. We recommend having two people on hand to safely assemble this product.

How to assemble Your Solenti Collection Sofa

1. Lay the Back Frame (A) on a protected, level surface, with the mortises (precut sockets in the wood) and single tenon (projecting piece of wood) facing up. Lift the Seat Frame (B) and lower it onto the Back Frame.

