



Smith & Hawken®

Metal Umbrella

With Smith & Hawken's 30 year history, you can rest assured that each piece we sell is impeccably crafted and beautifully designed to honor the heritage of gardening and outdoor living. We thank you for purchasing the Metal Umbrella, a piece that's sure to bring you years of enjoyment.

To ensure easy assembly, please read this manual. Should you experience any problems, please contact Guest Service at 1-800-591-3869.

NOTE: BEFORE ASSEMBLING, MAKE SURE YOU HAVE ALL PARTS AND HARDWARE LISTED BELOW.

Unpack the Metal Umbrella on a protected, level surface and identify the following components.

Included Parts

- A. Finial
 - B. Canopy/Mainframe
 - C. Bottom Pole
- Base sold separately

SAFETY PRECAUTIONS:

- Close and store the umbrella in windy conditions or when a storm approaches. Never allow the umbrella to flap in the wind; this could damage the canopy.
- Do not leave open umbrella unattended. If damage occurs, this is not covered by the warranty.
- When adjusting the umbrella, make sure that no person(s) or item(s) are close to the umbrella. This is important to prevent injury or material damage.



 
Smith & Hawken®

UNCOMPROMISING QUALITY™

Target.com/smithandhawken · Guest Service: 1-800-591-3869

© 2011 Target Stores.

How to assemble Your Metal Umbrella



1. Carefully remove umbrella from box. Attach Finial (A) to top of Canopy/Mainframe (B). Turn the umbrella upright and insert into the Bottom Pole (C). Crank the handle slowly until the slack in the cord is taken up.



Opening & Tilting Umbrella

2. Turn crank clockwise to open umbrella to its fully open position. To tilt, simply twist the collar in clockwise direction.



Closing Umbrella

3. Twist collar in counter-clockwise direction to bring umbrella back to its original upright position. Turn crank in counter-clockwise direction to close umbrella.