


what have you got to hide?

There's a slipcover for almost every shape, size or pattern you're looking for.


regular seat cushions

	chair	loveseat	sofa
arm length	32"–43"	58"–73"	74"–96"
seat cushion width	34" max	59" max	86" max
body width	116" max	140" max	168" max
contour length	64" max	64" max	64" max

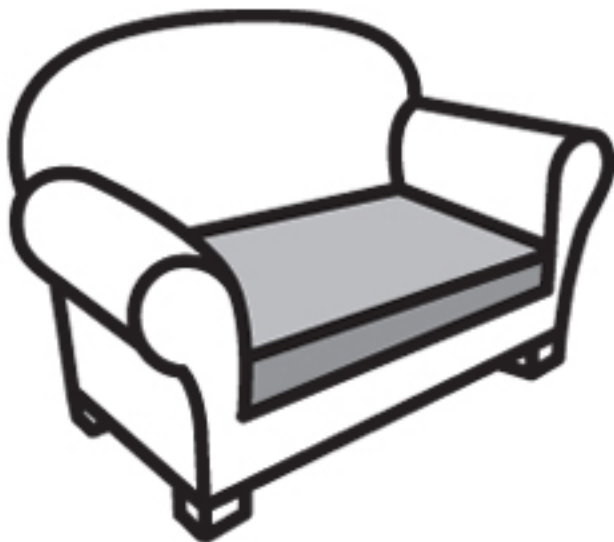

t-cushions

	chair	loveseat	sofa
arm length	32"–43"	58"–73"	74"–96"
seat cushion width	34" max	45"–59"	59"–86"
body width	116" max	140" max	168" max
contour length	64" max	64" max	64" max

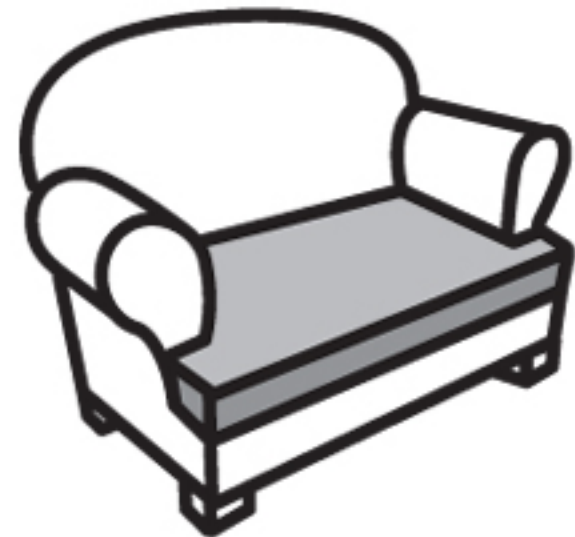

size it up – it makes all the difference.


Don't forget about cushions and wings when measuring.

Step 1

Measure outside arm to outside arm.

Step 2

Measure the maximum cushion width, starting where the cushion meets the arm. Measure the entire length of all cushions. For T-cushions, include the outside edge.

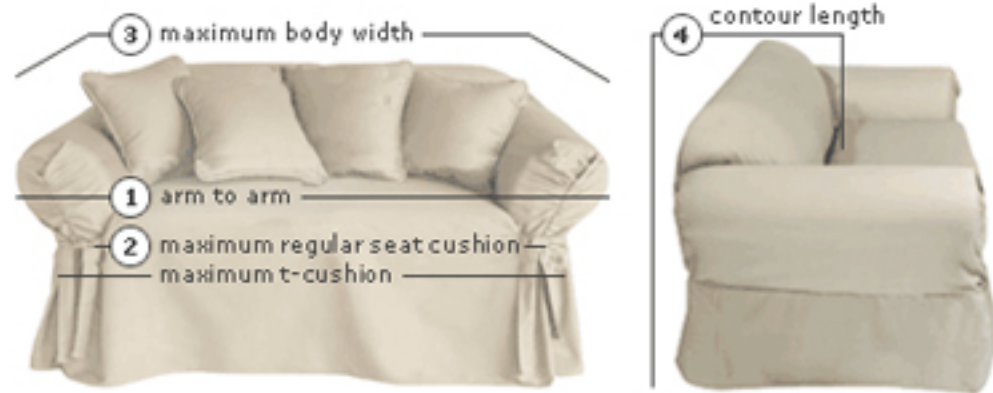

Step 3

Measure maximum body width, starting from the outside edge of the right arm and continuing around the back of the furniture. Finish at the outside edge of the left arm.

Step 4

Measure the contour length, starting with the back of the seat cushion. Then go over the top of the furniture, back and down to the floor.

slip it on – yes, it can be that easy.

Follow these simple steps for a just-like-new look.

Step 1

Drape slipcover over furniture from front to back. Drape slipcover over furniture arms and pull cover over back. (if two piece, remove cushions).



Step 4

Turn and smooth to fit and contour shape, working from the arms to the back.



Step 2

Pull down fabric to ensure it touches the floor evenly on each side.



Step 5

Tie up the ties along the skirt and pull the fabric tight along the base. Replace throw pillows and enjoy.



Step 3

Position arms and tuck excess fabric into creases. Ensure seams are lined up to flatter furniture.

